

产品明细

F-500 泥浆泵配件				
序号	产品图号	产品名称	单位	备注
1	AH35001-02.03	密封垫圈	件	Gasket
2	AH35001-02.19A	主轴承螺栓	件	Housing Bolt Main Bearing
3	AH35001-03.03	耐磨套	件	Oil Seal Wear Ring(Wear Plate)
4	AH35001-03.05	密封垫圈	件	Gasket
5	AH35001-03.06	密封垫圈	件	Gasket
6	AH35001-03.09A	密封垫圈	件	Gasket
7	AH35001-03.11	油封	件	Oil Seal
8	AH35001-03.13	盘泵法兰	件	Flange
9	AH35001-03.14	集油盒	件	Oil Collecting Box
10	AH35001-03.03	耐磨套	件	Oil Seal Wear Ring
11	AH35001-03.14.00	集油盒	件	Oil Collecting Box
12	AH35001-04.01	十字头	件	Crosshead
13	AH35001-04.02	导筒	件	
14	AH35001-04.05	十字头销	件	Crosshead Pin
15	AH35001-04.06	十字头销轴板	件	Crosshead Pin Retainer
16	AH35001-04.04	填料盒	件	Diaphragm Stuffing Box
17	AH35001-04.07	挡泥板	件	Fluid Baffle back-up Plate (Baffle)
18	AH35001-04.09	锁紧弹簧	件	Lock Spring
19	AH35001-04.10A	油封环	件	Sealing Ring (Oil Seal)
20	AH35001-04.12	中间拉杆	件	Crosshead Extension
21	AH35001-04.13	“O”型圈	件	O Ring
22	AH35001-04.15A	螺栓 M33×90	件	Bolt M33×90
23	AH3501-04.20	十字头轴承	件	Crosshead Bearing
24	AH35001-04.21	双唇油封	件	Double Lip Oil Seal
25	AH35001-05.01.00	液缸总成	件	Fluid End Studded Assy.

26	AH35001-05.02	缸盖法兰	件	Thread Ring
27	AH35001-05.03A	缸盖	件	Cylinder Cover
28	AH35001-05.04	缸套密封圈	件	Liner Seal
29	AH35001-05.05	缸盖堵头	件	Cylinder Head Plug
30	AH35001-05.06	顶缸器	件	Pressing Sleeve
31	AH35001-05.07	“O”型圈	件	O-Ring
32	AH35001-05.09	阀盖密封圈	件	Valve Cover Seal
33	AH35001-05.11A	阀盖	件	Valve Cover
34	AH35001-05.12	阀杆导向器（上）	件	Valve Guide（Upper）
35	AH35001-05.13	挡板	件	Retainer
36	AH35001-05.14A.00	阀总成	件	Valve Assy.
37	AH35001-05.14A.01.04	阀体总成	件	Valve Body Assy.
38	AH35001-05.14A.03	阀胶皮	件	Valve Insert
39	AH35001-05.14A.05	阀座	件	Valve Seat
40	AH35001-05.15A	锁紧螺母 M24	件	Piston Nut M24
41	AH35001-05.16.01	螺母	件	Nut
42	AH35001-05.16A	阀弹簧	件	Valve Spring
43	AH35001-05.18A	活塞杆	件	Piston Rod
44	AH35001-05.20.01	活塞 \varnothing 100	件	Piston \varnothing 100
45	AH35001-05.20.02	活塞 \varnothing 110	件	Piston \varnothing 110
46	AH35001-05.20.03	活塞 \varnothing 120	件	Piston \varnothing 120
47	AH35001-05.20.05	活塞 \varnothing 140	件	Piston \varnothing 140
48	AH35001-05.21.00	卡箍总成	件	Piston Rod Clamp
49	AH35001-05.22	缸套端盖	件	Liner End Cover
50	AH35001-05.23	固定卡	件	Liner Cage
51	AH35001-05.24.00	阀杆导向器（下）	件	Valve Guide（Lower）
52	AH35001-05.29A.01	胶囊	件	Capsule
53	AH35001-05.29A.02	端盖	件	Cover
54	AH35001-06.28B.00	油泵齿轮总成	件	Oil Pump Gear Assy.

55	AH35001-08B.00	喷淋泵总成	件	Piston and Liner Wash (Spray Pump Assy.)
56	AH35001-12	密封圈	件	Seal
57	AH35001-14A	十字头孔盖	件	Crosshead Door
58	AH35001-15	密封垫	件	Gasket
59	AH35001-18	垫环	件	Ring Gasket
60	AH35001-20.03	阀盖棒	件	Valve Cover Stick
61	AH35001-20.03.01	支撑座	件	
62	AH35001-02.06.00A	液压拔阀器	件	Seat Lifting Tool (Valve Seat Puller)
63	AH35001-22	顶视孔盖密封圈	件	Seal
64	AH35001-23	丝堵	件	Screw Plug
65	AH35001-07.00	喷淋泵总成	件	Spray Pump